



16605644

Edition 5

March 2023

Air Percussive Rammer

Models 130A1M and 241A1M


Parts Information



Save These Instructions



Model 130A1M, Air Percussive Rammer - Exploded View

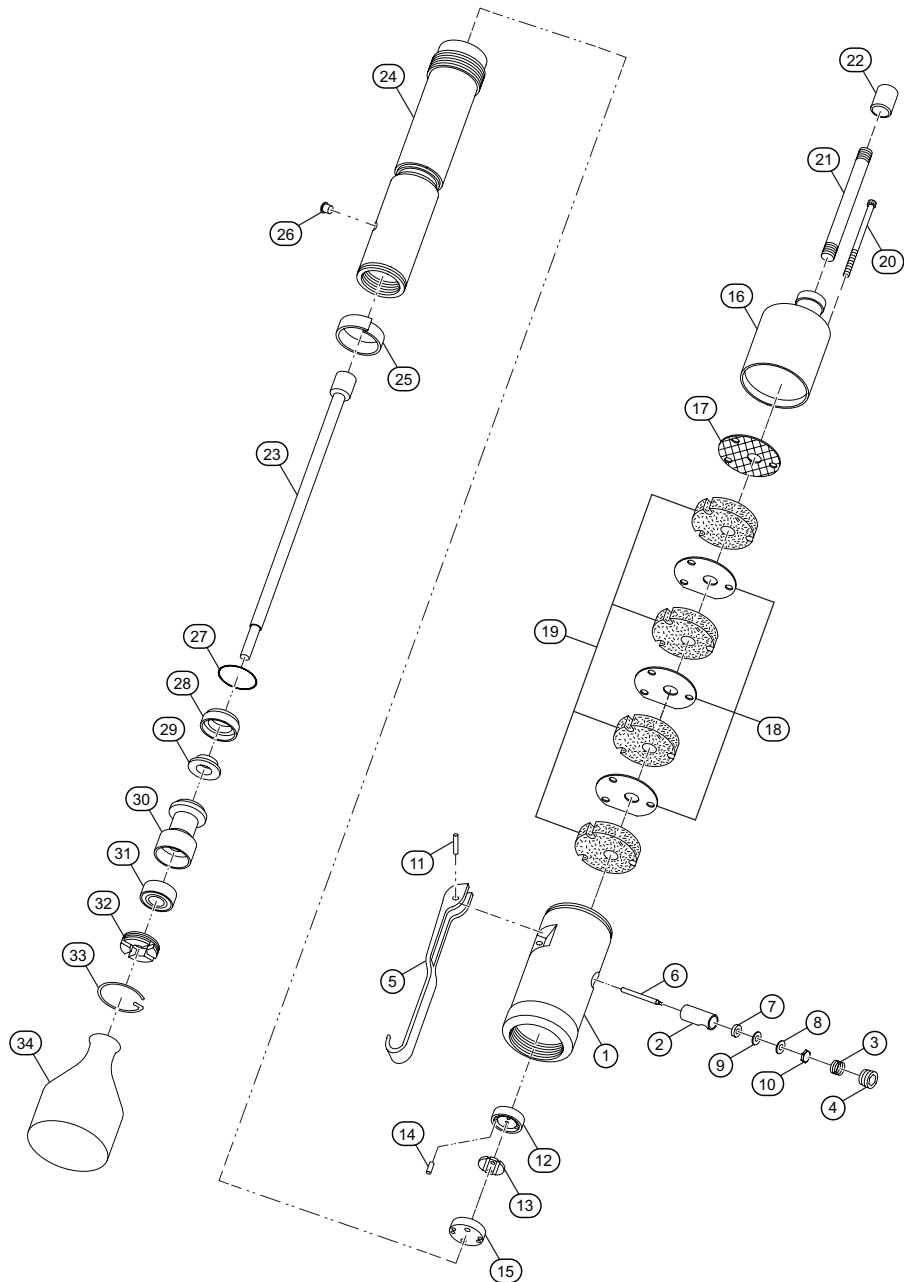


Model 130A1M, Air Percussive Rammer - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
	Head Block Assembly for Built-in Muffler		20	Adapter Screw (3 required)	12E-354
	for 130A1M	130SR-A114	21	Pipe Nipple (1/4" x 4")	HUS-913
	for 130A1M-EU	130SR-EU-A114	22	Pipe Coupling (1/4")	140SR-117
	Warning Label		23	Piston	130SR-R20
	for 130A1M	WARNING-6-99	24	Barrel	130SR-R10
	for 130A1M-EU	EU-99	25	Barrel Clip	130SR-35
1	Head Block	130SR-114	26	Grease Fitting	130SR-188
2	Throttle Valve Bushing	130SR-503	27	Seal Support Gasket	MT4-210
3	Throttle Valve Spring	AR-51	28	Seal Support	130SR-28
4	Throttle Valve Cap	GA57-95	29	Rod Rear Seal	130SR-30
5	Throttle Lever	130SR-263	30	Piston Rod Guide	130SR-32
6	Throttle Valve	130SR-302	31	Rod Front Seal	130SR-31
7	Throttle Valve Face Washer	130SR-156	32	Guide Retainer	130SR-33
8	Throttle Valve Face Cap	R38-157	33	Guide Retainer Lock	130SR-34
9	Throttle Valve Face	R38-159	34	Malleable Butt (2-1/2" diameter)	12SR-83
10	Throttle Valve Face Cap Nut	AVC11-158	*	Male Hose Nipple (3/8" hose to 1/4" male pipe)	D01-14
11	Throttle Lever Pin	D01-368		Rubber Tipped Butt (2-3/8" diameter)	14SR-83R-2 3/8
12	Valve Box Cap	14SR-43		Rubber Tip for Butt	14SR-84
13	Valve	14SR-40	*	Rubber Tipped Peen (3/4" x 2-3/8")	14SR-93R
14	Valve Box Dowel (4 required)	14SR-45	*	Rubber Topping-Off Butt (3-29/32" diameter) (solid rubber with steel insert)	14SR-83R-4
15	Valve Box	14SR-41		Piston	
16	Piped-Away Exhaust Adapter	140SR-115	*	0.004" oversize	130SR-R20-4
17	Adapter Screen	140SR-122		0.016" oversize	130SR-R20-16
18	Adapter Baffle (3 required)	140SR-116			
19	Exhaust Silencer (4 required)	140SR-311			

* Indicates not illustrated.

Model 241A1M, Air Percussive Rammer - Exploded View

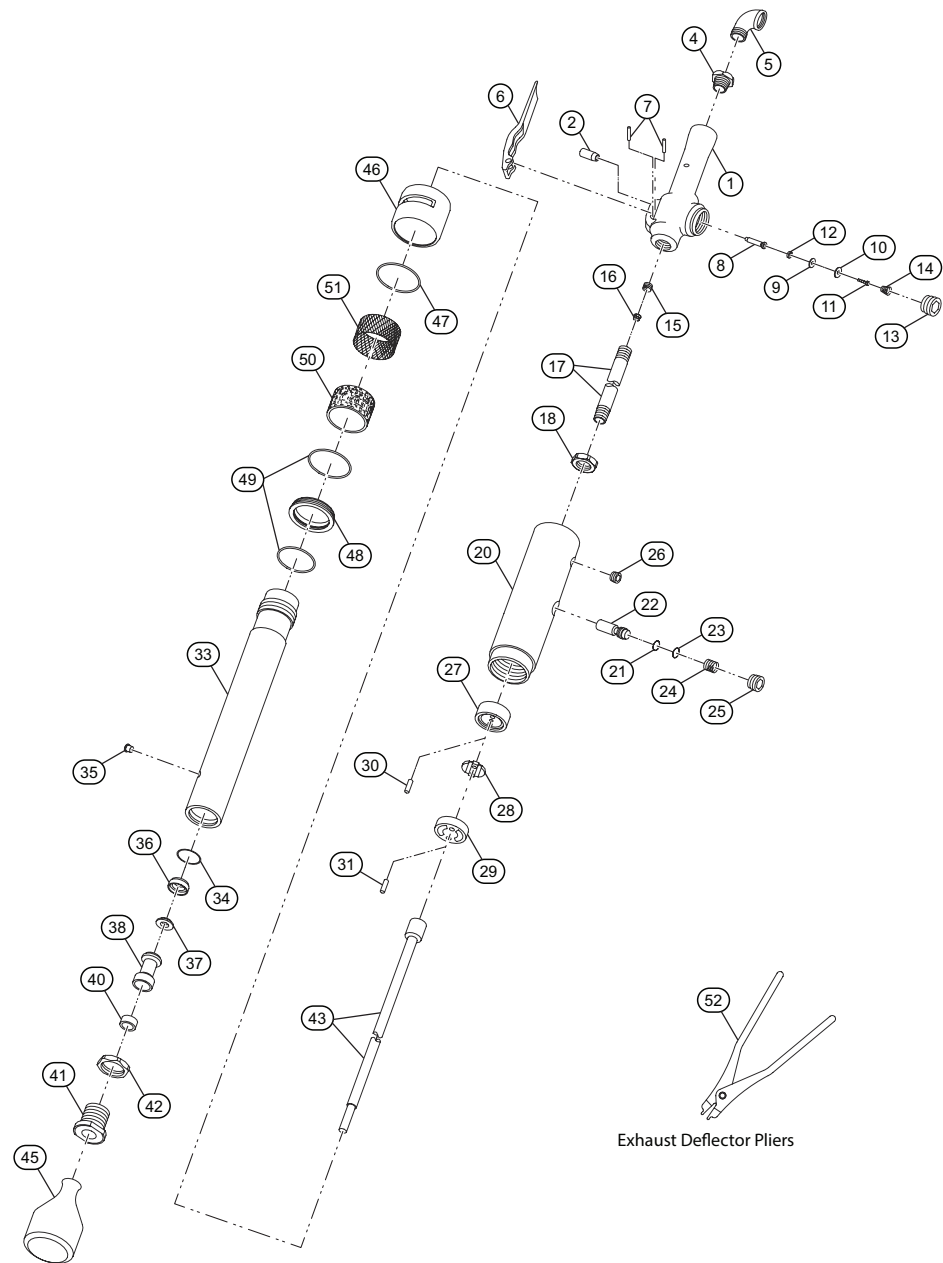

(Dwg. TPA117-10)

Model 241A1M, Air Percussive Rammer - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
	Throttle Handle Assembly		27	Valve Box Cap	245R-43
	for 241A1M	241SR-A160	28	Valve	245R-40
	for 241A1M-EU	241SR-EU-A160	29	Valve Box	241SR-41
	Warning Label		30	Valve Box Cap Dowel (2 required)	33SR-45
	for 241A1M	WARNING-6-99	31	Valve Box Dowel (2 required)	D01-527
	for 241A1M-EU	EU-99	33	Barrel for Piston with Round Rod	241SR-R10
1	Throttle Handle Body	150SR-160	• 34	Seal Support Gasket	FMD2-198
2	Throttle Valve Bushing	150SR-503	35	Grease Fitting	130SR-188
4	Reducing Bushing (1/2" to 3/8")	13SR-9	36	Seal Support	241SR-28
5	3/8" Street Elbow	12SR-8	• 37	Rod Rear Seal	241SR-30
6	Throttle Lever	33SR-163	38	Piston Rod Guide	241SR-A32A
7	Throttle Lever Pin or Throttle Lever Stop Pin (2 required)	5040T-962	• 40	Rod Front Seal	241SR-31
8	Throttle Valve	150SR-302	• 41	Guide Retainer	241SR-33A
• 9	Throttle Valve Face	MT4-159	42	Locking Nut	241SR-17
10	Throttle Valve Face Cap	R4-157	43	Piston with Round Rod	
				Standard Size	241SR-R20
11	Throttle Valve Face Retaining Screw	4U-359		0.004" Oversize	241SR-R20-4
				0.008" Oversize	241SR-R20-8
12	Retaining Screw Lock Washer	H54U-352		0.016" Oversize	241SR-R20-16
13	Throttle Valve Cap	DLC-165	45	Malleable Butt 3" Diameter	225R-83-3 x 3/4
14	Throttle Valve Spring	150SR-262	*	Muffler Kit	241SR-K123
15	Screen Retaining Spring	241SR-5	46	Exhaust Deflector Assembly	241SR-A123
16	Air Strainer Screen	434-61	47	Deflector Seal	C6H20A-104
17	Handle		48	Deflector Retainer Assembly	241SR-A124
	Standard Length (19-1/2")	34SR-1A	49	Deflector Retainer Seal (2 required)	R10V-310
	Extra Long (26")	341SR-201	50	Exhaust Silencer	241SR-311
18	Handle Lock Nut	241SR-118	51	Deflector Screen	241SR-122
20	Head Block	241SR-14	52	Exhaust Deflector Pliers	34SR-54
• 21	Lubricator Valve Seat	R18L-14	*	Rubber-Tipped Butt (3" diameter)	24SR-83R-3
22	Lubricator Valve	241SR-101			
23	Lubricator Valve Face	R0AR-210	*	Jumbo Rubber Topping off Butt (5" diameter)	24SR-83R-5
24	Lubricator Valve Spring	245R-106			
25	Lubricator Valve Cap	HH-266			
26	Oil Chamber Plug	R0H-377			

* Indicates not illustrated.

• Indicates common-wear parts. Maintain stock to reduce downtime.

Parts and Maintenance

When tool life has expired, it is recommended that the tool be disassembled, degreased and parts separated by material for proper recycling.

Tool repair and maintenance should only be carried out by an Authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** office or distributor.

Related Documentation

Manuals can be downloaded from ingersollrand.com

For additional information, refer to:

Product Safety Information Manual 04581450

Product Information Manual 03539574

Notes:

Notes:
